

# LED PLAYER GUIDE

Your Mood Harmony™ Player comes with a 3.5mm AUX to RCA audio cable. If your player is set up with 2 zones of audio, Zone 1 uses the white RCA plug and Zone 2 uses the red RCA plug. If you have only 1 zone of audio, you'll only need to connect the white plug into your sound system.

**NOTE:** Do not use the yellow plug on the RCA audio cable - you don't need it for your audio.

**NOTE:** Check [bit.ly/harmony-support](http://bit.ly/harmony-support) for the latest version of this document.



## POWER LIGHT

| LIGHT STATUS            | MEANING   | RESOLUTION   |
|-------------------------|---|--|
| Off                     | No Power to the Device                          | Check that the device is plugged in to a working power outlet      |
| Solid Green             | Device is Powered On                            |  |
| Solid Red               | Device is Asleep                                | Use the remote control to turn device on<br>Power cycle the device |
| Slow Green / Red Toggle | Device is booting up - can take up to 2 minutes | If continues for more than 2 minutes, power cycle the device       |
| Fast Green / Red Toggle | Receiving commands from the remote control      |  |

## NETWORK LIGHT

| LIGHT STATUS          | MEANING  | RESOLUTION  |
|-----------------------|--|---|
| Off                   | No network connection  | Check network cable and WiFi settings                                 |
| Solid Green           | Device connected to the Internet and communicating with Mood services            |   |
| Solid Orange          | Device connected to the Internet but <b>not</b> communicating with Mood services | Contact your network administrator                                    |
| Green / Orange Toggle | Device is connected to the network but not connecting to the Internet            | Contact your network administrator                                    |
| Slow Orange Blink     | WiFi not connected to the network  | Use the Harmony Setup Mobile App to connect the player to the network |

## PLAYBACK LIGHT

| LIGHT STATUS          | MEANING   | RESOLUTION   |
|-----------------------|---|--|
| Solid Green           | Music is playing                                    |  |
| Solid Red             | Playback hasn't started                             | Power cycle the media player if playback doesn't start after 2 minutes |
| Green / Orange Toggle | Device is playing silence                           | Use the remote control to check the device's volume                    |
| Red / Orange Toggle   | External storage (micro SD) is unplugged or damaged | Check / replace micro SD   |