

PROFUSION IH + DVD

HOW TO UPDATE THE PLAYER



Select ProFusion IH models can be updated via CD. It is important to update your device as soon as you receive any update CDs. Please note that customers with devices configured for Ethernet updates may still receive CD updates, and should load them as soon as they arrive.

Always verify the update disc is clean and free of scratches, smudges and fingerprints. To clean a CD use a lint-free cotton cloth and wipe against the tracks, starting in the middle of the disc and wiping towards the outside of the disc. Do not wipe in a circular motion as this can create scratches.

1. If your update contains multiple CDs, locate disc #1 (discs are labelled as 1 of 3, 2 of 3 etc).
2. Hold the CD face up and by the edges
3. Press the DVD-ROM eject button to open the tray
4. Insert the CD into the center of the DVD-ROM tray
5. Push the tray in fully (it will remain latched when properly closed).
6. Approximately 15 seconds after the tray has closed, the update will automatically start.
The update will take anywhere from 60 seconds to 10 minutes, depending on the type and size of content on the disc.
7. The DVD-ROM tray will automatically eject once the update has completed and the control panel will display the status of the update.

CONTACT CUSTOMER SUPPORT

France	+33 (0) 13 079 5000	(or ticket_fr@moodmedia.com)
Belgium	+32 (0)15 744 100	(or ticket_be@moodmedia.com)
The Netherlands	+31 (0)36 747 0700	(or ticket_nl@moodmedia.com)
Germany	+49 (0)40 6944 0645	(or ticket_de@moodmedia.com)
United Kingdom	+44 (0)800 282 717	(or ticket_uk@moodmedia.com)
Romania	+40 (0)21 222 9417	(or ticket_ro@moodmedia.com)
Spain	+34 93 568 92 28	(or ticket_es@moodmedia.com)
Other countries	+33 (0) 13 079 5079	(or ticket_int@moodmedia.com)