

# DEVICE GUIDE

Your ProFusion iH Player comes with a 3.5mm AUX to RCA audio cable. If your player is set up with 2 zones of audio, Zone 1 uses the white RCA plug and Zone 2 uses the red RCA plug. If you have only 1 zone of audio, you'll only need to connect the white plug into your sound system.

**Note:** Do not use the yellow plug on the RCA audio cable - you don't need it for your audio.



## POWER LIGHT

LIGHT STATUS	MEANING	RESOLUTION
Off	No Power to the Device	Check that the device is plugged in to a working power outlet
Solid Green	Device is Powered On	
Solid Red	Device is Asleep	Use the remote control to turn device on Power cycle the device
Green / Red Slow	Device is booting up - can take up to 2 minutes	If continues for more than 2 minutes, power cycle the device
Green / Red Fast	Receiving commands from the remote control	

## NETWORK LIGHT

LIGHT STATUS	MEANING	RESOLUTION
Off	No network connection	Check network cable and WiFi settings
Solid Green	Device connected to the Internet and communicating with Mood services	
Solid Orange	Device connected to the Internet but <b>not</b> communicating with Mood services	Contact your network administrator
Green / Orange Slow	Device is in hotspot mode	Setup using the Mood Controller App on your mobile device
Green / Orange Fast	Device is connected to the network but not connecting to the Internet	Contact your network administrator
Slow Orange Blink	WiFi not connected to the network	Use the Mood Controller Mobile App to connect the player to the network

## PLAYBACK LIGHT

LIGHT STATUS	MEANING	RESOLUTION
Solid Green	Music is playing	
Solid Red	Playback hasn't started	Power cycle the media player if playback doesn't start after 2 minutes
Green / Orange Fast	Device is playing silence	Use the remote control to check the device's volume
Red / Orange Fast	External storage (MicroSD) is unplugged or damaged	Check / Reinsert MicroSD (if applicable)
Red / Green Fast	Music schedule has been overridden	