

# PROFUSION X

## HOW TO UPDATE THE PLAYER



It is important to update your device as soon as you receive any update CDs.

Always verify the update disc is clean and free of scratches, smudges and fingerprints. To clean a CD use a lint-free cotton cloth and wipe against the tracks, starting in the middle of the disc and wiping towards the outside of the disc. Do not wipe in a circular motion as this can create scratches.



If your update contains multiple CDs, locate disc #1 (discs are labelled as 1 of 3, 2 of 3 etc).



Find the Mood player and open the CD tray. Make sure there is no disk already inside.



Insert the CD into the tray, printed side up and close the tray.



The update will start automatically. The update can take from 5 to 20 minutes.



Once the update is completed, the screen will display "Update successful / Hit \* to continue".



Remove the CD from the tray, close the tray and press the \* button. The player will return to the normal display.

## CONTACT CUSTOMER SUPPORT

France	+33 (0) 13 079 5000	(or <a href="mailto:ticket_fr@moodmedia.com">ticket_fr@moodmedia.com</a> )
Belgium	+32 (0)15 744 100	(or <a href="mailto:ticket_be@moodmedia.com">ticket_be@moodmedia.com</a> )
The Netherlands	+31 (0)36 747 0700	(or <a href="mailto:ticket_nl@moodmedia.com">ticket_nl@moodmedia.com</a> )
Germany	+49 (0)40 6944 0645	(or <a href="mailto:ticket_de@moodmedia.com">ticket_de@moodmedia.com</a> )
United Kingdom	+44 (0)800 282 717	(or <a href="mailto:ticket_uk@moodmedia.com">ticket_uk@moodmedia.com</a> )
Romania	+40 (0)21 222 9417	(or <a href="mailto:ticket_ro@moodmedia.com">ticket_ro@moodmedia.com</a> )
Spain	+34 93 568 92 28	(or <a href="mailto:ticket_es@moodmedia.com">ticket_es@moodmedia.com</a> )
Other countries	+33 (0) 13 079 5079	(or <a href="mailto:ticket_int@moodmedia.com">ticket_int@moodmedia.com</a> )