
The remote control can be used to execute the most common actions such as changing the station and adjusting volume. It requires two AAA batteries. Rechargeable batteries are a good option if you expect to use the remote control frequently.

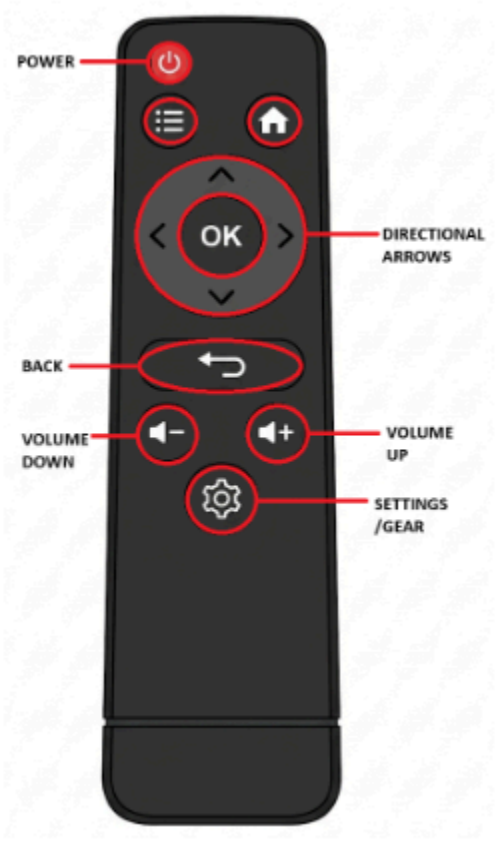

BUTTON	FUNCTION
Power	Switches between Playback and Standby modes. Standby mode stops all playback and puts the player into a low-power state. The player can receive configuration updates in Standby mode.
Navigation Keys	• **Up/Down -** change the Programs/Channel • **Left -** changes the Device to Zone *(If single Zone Device this button will not do anything)* • **Right -** changed the Device to Zone 2 *(If single Zone Device this button will not do anything)*
Back	• Press and hold for 2 - 5 seconds -> trigger IP2SPEECH • Press and hold for 5 - 25 seconds -> "Reset admin password" • Press and hold for longer than 25 seconds -> "Reset network settings"
Volume Up/Down	Pressing either increases or decreases the volume of the Music on the player

Setting/Gear	Press and hold for about 3 seconds starts device hotspot: enabling a Mobile Device to connect with ProFusion player and setup with Mood Controller 2.0 app

NOTE: Weak batteries, scratched or dirty lenses, fluorescent lights and sunlight may interfere with remote control operation. Make sure the remote control has fresh batteries that are properly inserted. Shade the front panel of the player from direct light sources. Ensure the remote control and player IR lenses are clean/clear.