

Wireless Headset Intercom, Model C1060

Instructions for Programming Headset and Replacing Ear and Headband Pads

To Program Headset:

1. Turn on base station. One of the red channel indicators (1-8) will light indicating the selected channel.
2. With headset turned OFF, swing microphone back, and insert headset into programming station with its programming window facing toward programming cable jacks (see Figure 1).


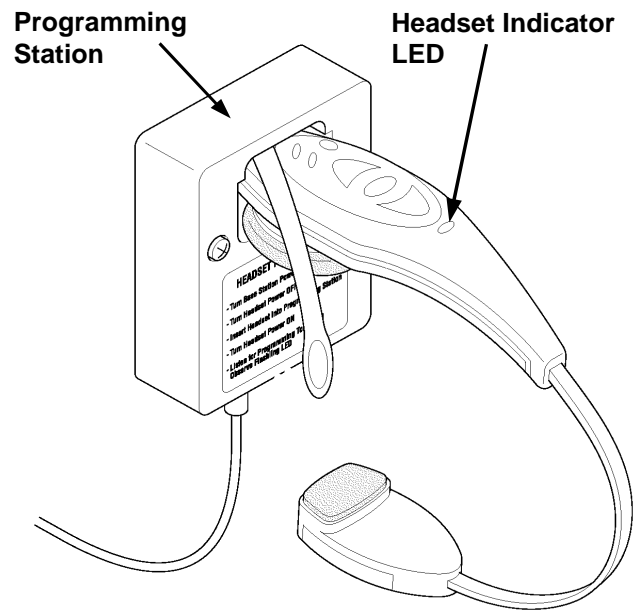


Figure 1.

3. While the headset is in the programming station, turn it ON. The indicator LED flashes indicating that programming is complete. Headset is now programmed to same channel as base station.

Headset Controls:

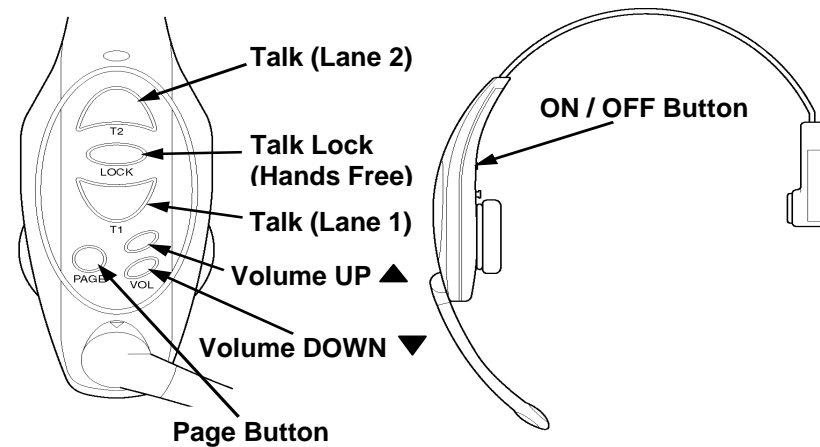

To Replace Ear Pad and Headband Pad:

Ear pad:

1. Lift off old ear pad.
2. Place new ear pad over top of earpiece and pull downward, stretching to cover earpiece (see Figure 2).

Headband pad:

1. Peel old headband pad from back of battery housing.
2. Remove protective backing from new pad and press it into place on back of battery housing (see Figure 2).

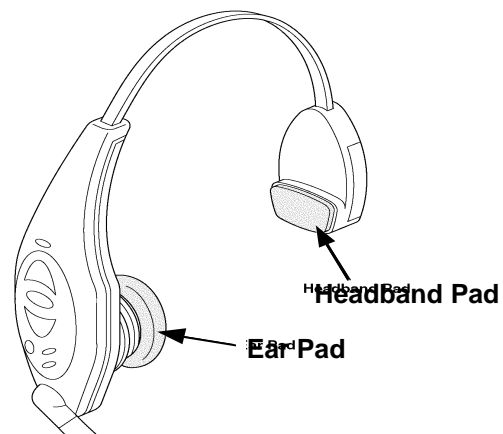


Figure 2.

Auricular Inalámbrico Intercom, Modelo C1060

Instrucciones para programar el auricular y cambiar las almohadillas de la banda para la cabeza y el oído

Para programar el auricular:


1. Encienda la estación base. Uno de los indicadores rojos del canal (1 - 8) se iluminará indicando el canal seleccionado.
2. Con el auricular apagado (en OFF), eche para atrás el micrófono e introduzca el auricular en la estación de programación con su ventana de programación mirando hacia las conexiones del cable de programación (vea la Figura 1).



Figura 1.

3. Mientras el auricular está en la estación de programación, enciéndalo (ON). El indicador LED parpadea indicando que se ha completado la programación. Ahora, el auricular está programado en el mismo canal que la estación base.

Controles del auricular:

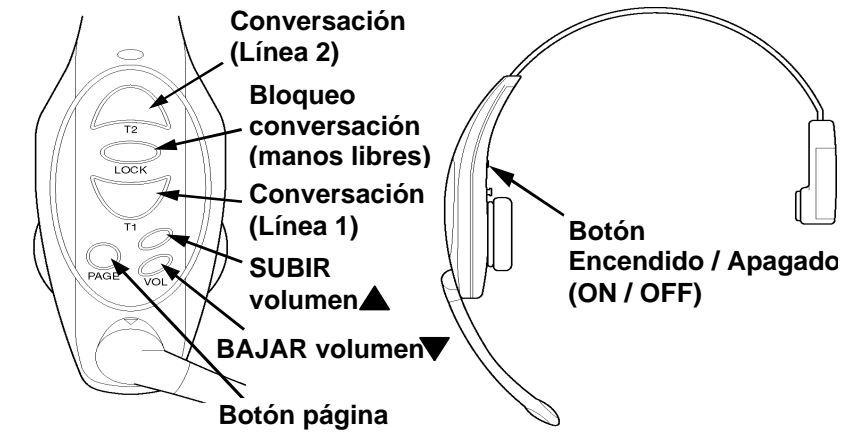

Para cambiar la almohadilla del oído y la almohadilla de la banda para la cabeza:

Almohadilla para el oído:

1. Quite la almohadilla vieja del oído.
2. Coloque la almohadilla nueva del oído en la parte superior del auricular y tire hacia abajo de ella, estirándola hasta cubrir el auricular (vea la Figura 2).

Almohadilla de la banda para la cabeza:

1. Quite la almohadilla vieja de la banda para la cabeza de la parte posterior del compartimiento de baterías.
2. Quite el revestimiento protector de la nueva almohadilla y colóquela en la parte posterior del compartimiento de las baterías (vea la Figura 2).



Figura 2.